Stim2Go Neurostimulator - Program description

Assisted Cycling 5CH with tSCS

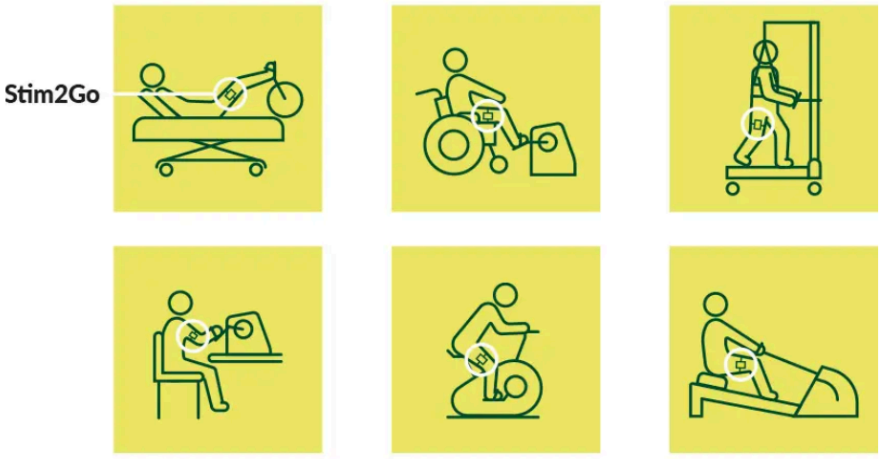

Assisted Cycling 5CH with tSCS

Program ID – mode: FES19 – Motion triggered cyclic

Supports cycling by the stimulation of the lower limb muscles. The cycling motion is detected by placing the stimulator on the right thigh. The range 0 to 50% of the cycle corresponds to the extension phase of the right leg and flexion phase of the left leg. The range 50 to 100% of the cycle corresponds to the flexion phase of the right leg and extension phase of the left leg. In addition, the use of lumbar tSCS trains trunk stability and alleviates spasticity in the lower limbs.

Indication: Function recovery, Muscle training, Spasticity reduction

Body region: Lower extremities

Required stimulation cable: 5 channel cable

Channels: Channel 1, Channel 2, Channel 3, Channel 4, Channel 5

Solo mode allowed:[1] No

Measurement mode:[1] Horizontal

This program is available only within the scope of MDR approval and is not cleared for market by the FDA.

Placement of electrodes and stimulator

Channel	Description	Electrode description / Size
1	Knee extensor right	Bipolar, rectangle / 2" × 3.5" (5cm × 9cm)
2	Knee extensor left	Bipolar, rectangle / 2" × 3.5" (5cm × 9cm)
3	Knee flexor right	Bipolar, rectangle / 2" × 3.5" (5cm × 9cm)
4	Knee flexor left	Bipolar, rectangle / 2" × 3.5" (5cm × 9cm)
5	Lumbar tSCS	3× rectangular + adapter cable 1:2 / 2" × 3.5" (5cm × 9cm)

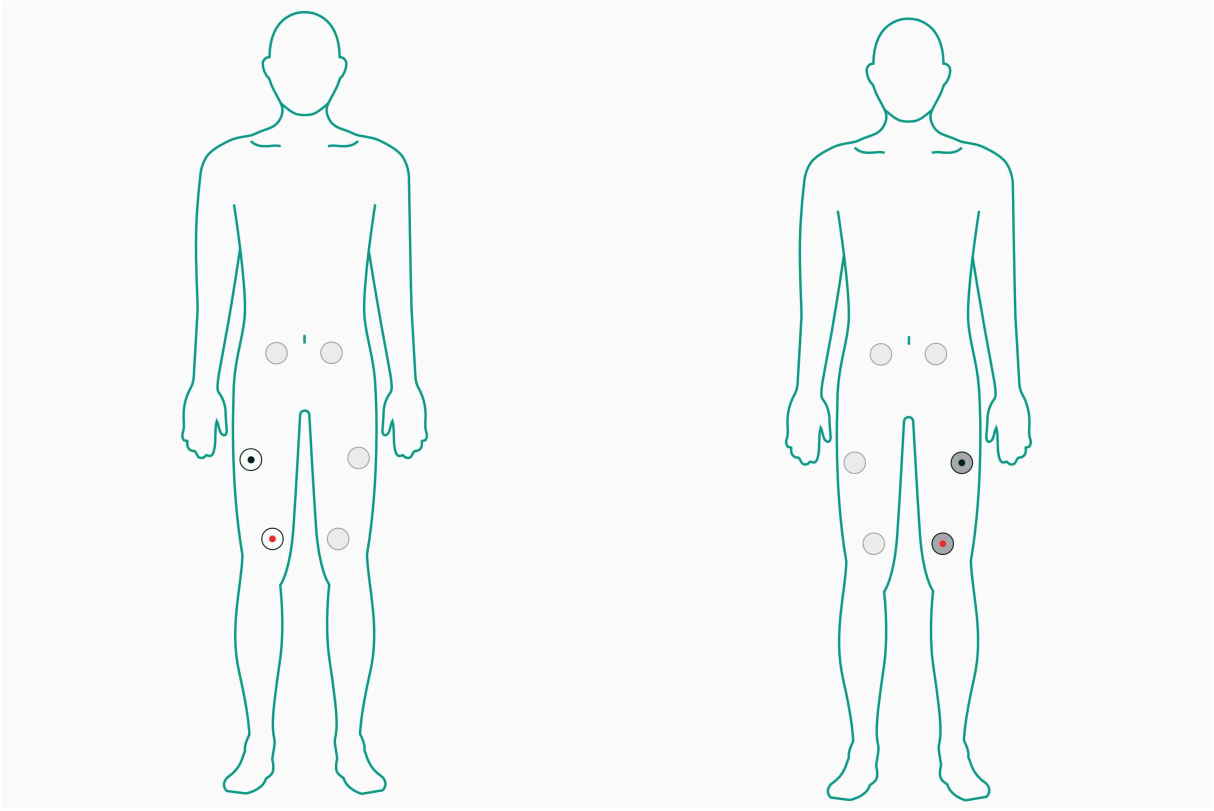

Electrode placement:

Channel 1 – Knee extensor right

Channel 2 – Knee extensor left

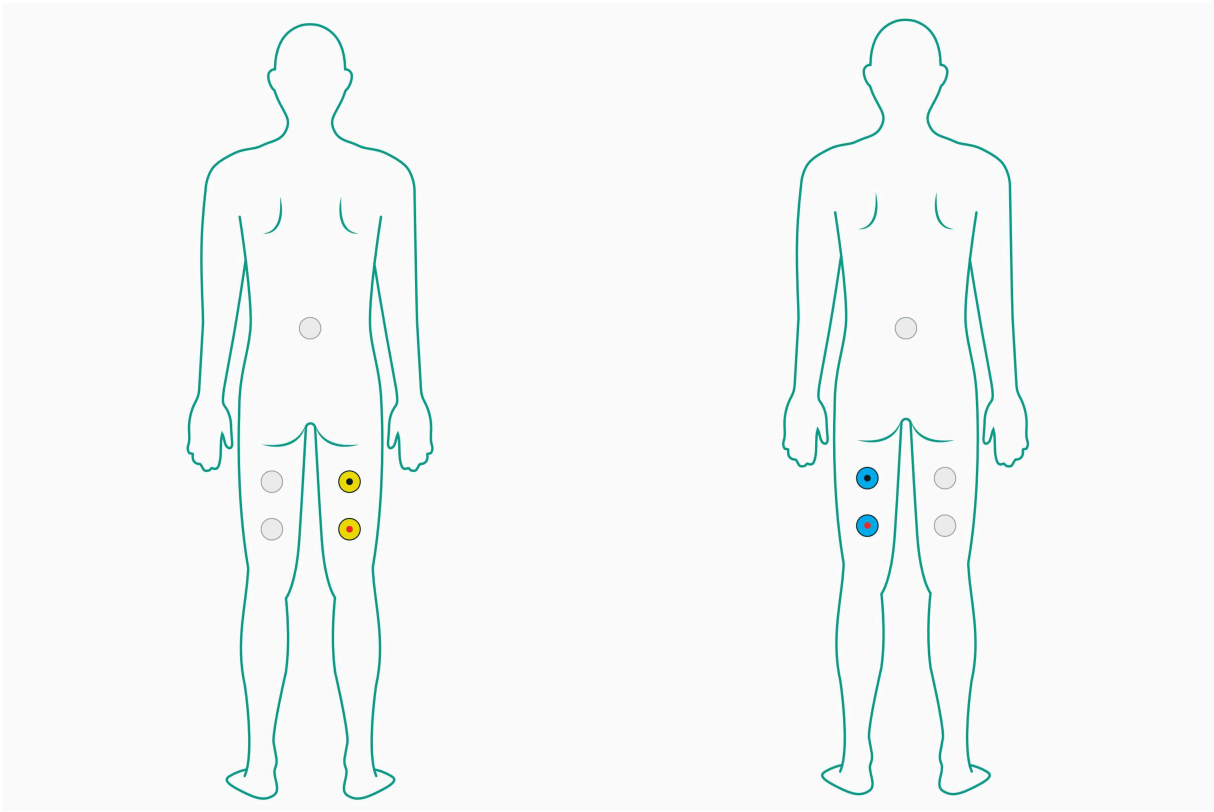

Electrode placement:

Channel 3 – Knee flexor right

Channel 4 – Knee flexor left

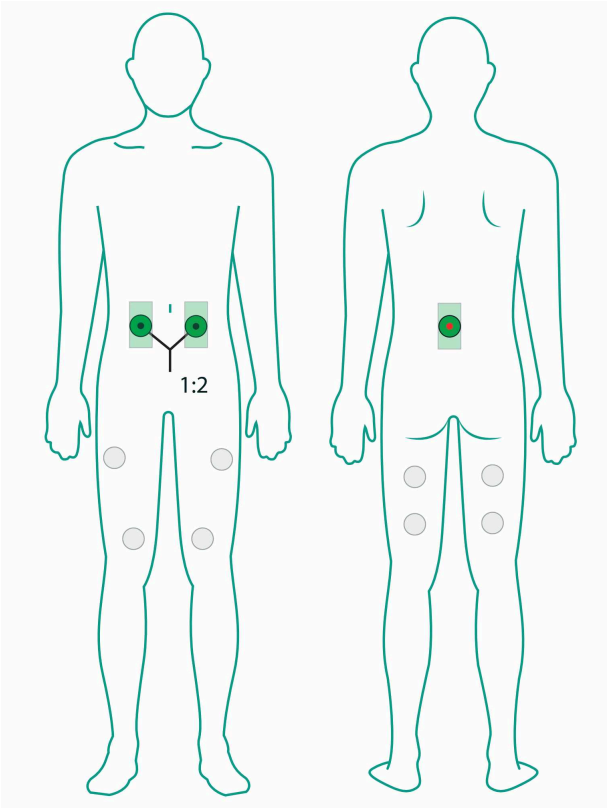

Electrode placement: Channel 5 – Lumbar tSCS

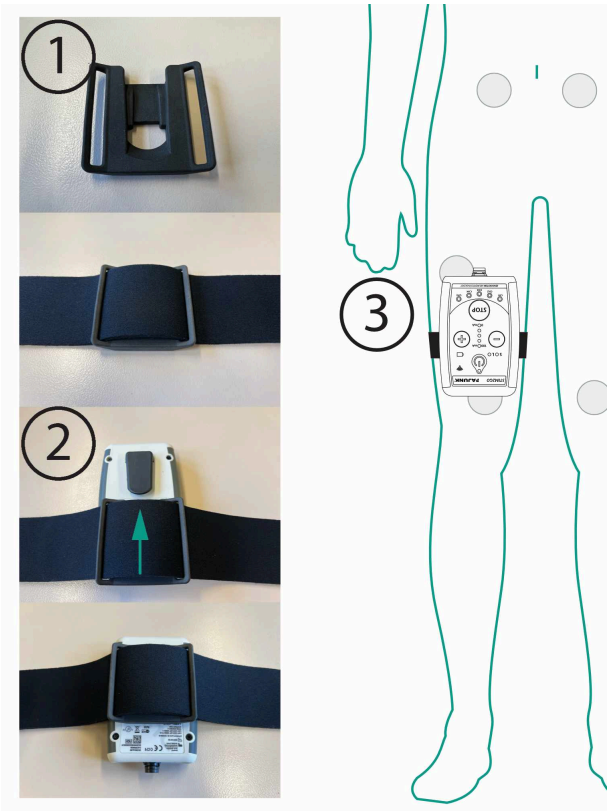

Stimulator placement: 1) Attaching the strap holder to the strap.
2) Mounting the stimulator to the strap holder.
3) The stimulator position on the limb required for this program.

Channel settings for stimulation stages

Training:

Total duration	30:00:000 (min:sec:msec)
Sequence duration	n.a.
Sequence mode[2]	Motion triggered with threshold
Show intensity wizard[1]	Yes

Channels	Max. amperage	Pulse width	Frequency	Pulse form	Channel mode[3]
1	100.0 mA	500 µs	33.3 Hz	Biphasic	Sequential
2	100.0 mA	500 µs	33.3 Hz	Biphasic	Sequential
3	100.0 mA	500 µs	33.3 Hz	Biphasic	Sequential
4	100.0 mA	500 µs	33.3 Hz	Biphasic	Sequential
5	100.0 mA	800 µs	50.0 Hz	Biphasic without pause	Always on

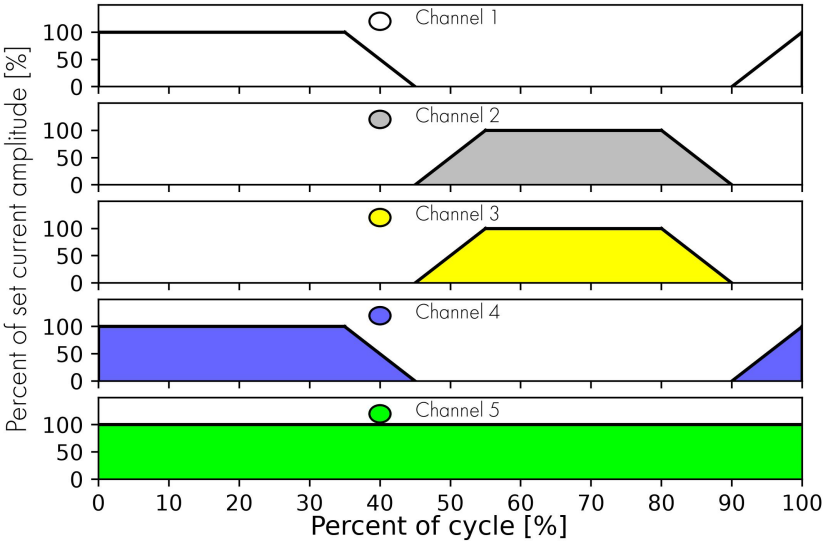

Activation of the stimulation channels for training

1. Settings

Solo mode:	Allows a program to run independently without a smartphone connection once the program has been started in the app and the electrode placement is completed. By activating the SOLO mode, the app disconnects from the stimulator. The stimulator runs and controls the program solo (without the app). The user can simultaneously increase/decrease the stimulation intensity of all active channels with the PLUS and MINUS keys on the stimulator's keypad or end the program by pressing STOP.
Intensity wizard:	The intensity wizard is displayed before the start of a program stage in order to preset and test the intensity of each individual channel in advance.

Measurement mode

Horizontal measurement mode:	The inclination angle is measured within ±80° of the horizontal reference line. Rotation of the stimulator around its longitudinal axis does not affect the calculated angle, providing greater flexibility in stimulator orientation..
Vertical measurement mode:	The inclination angle is measured within ±80° of the vertical reference line. Rotation around the stimulator's longitudinal axis affects the calculated angle, so the stimulator must be attached in the position and orientation shown in the app.

2. Sequence mode

Auto repeat:	The stimulation sequence is automatically repeated for the duration of the program stage.
Motion triggered with threshold:	The stimulator is attached to the arm or leg depending on the program. For cyclical activities such as cycling or arm cranking, the current movement status is determined as a percentage of the cycle using the integrated sensor. The stimulation is controlled depending on the value determined and can be activated in up to three phases per active channel.
Motion triggered cyclic:	The stimulation sequence is triggered when the inclination angle exceeds or falls below a predetermined threshold value. The stimulator is placed on an arm or leg to measure the inclination angle with a built-in sensor.
Manually triggered:	The stimulation sequence is manually triggered by the operator using the Stim2Go app.

3. Channel modes

Sequential:	The stimulation pattern consists of repeated stimulation sequences which are activated depending on the sequence mode. The stimulation sequences consist of one to three phases and have a predetermined duration in most programs. The duration of the stimulation sequence of cyclic motion-triggered programs is not fixed because it depends on the speed of the cyclic movement.
Always on:	The stimulation of the channel is permanently active. Stimulation sequences are not relevant.